


# Quick operating instructions

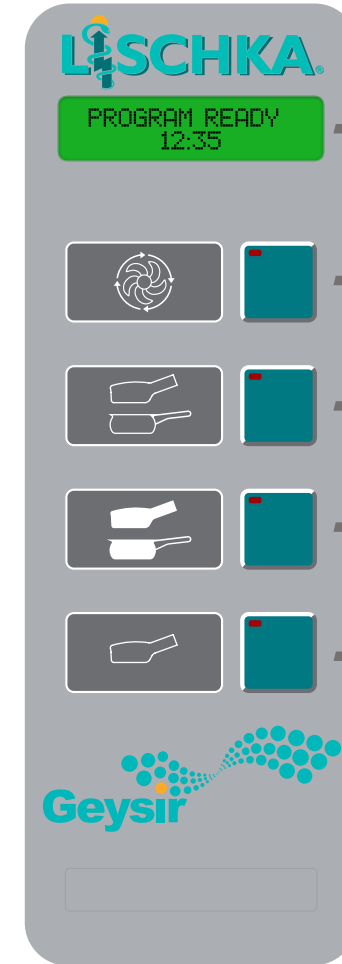

**LCD Screen**  
Displays status in text format

**Fan supported recooling (optional)**  
Red LED is on when activated

**Normal program**  
for normal soilings


**Intensive program**  
for heavy soilings

**Short program**  
for light soilings

## Error or malfunction messages

**To resume programs:** press any key for minimum 3 seconds

**Malfunction persists:** call technical support

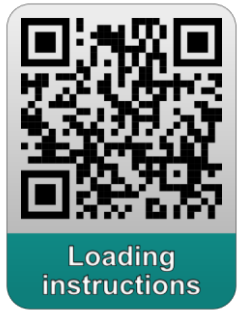

090008 loading variants (EN) 04.05.2023 Rev.5

Subject to technical changes